

INFINITY SAFE

Slip resistant sheet vinyl

RECOMMENDED MAINTENANCE PROCEDURES

Initial Care:

After installation is completed:



1. Remove all debris (electrostatic mop or vacuum).
2. Damp mop using Armstrong **Accolade Safe Plus Bathroom Floor & Surface Cleaner*** (*or similar low alkali or a pH neutral cleaner).

Allow 48 hours before carrying out the following:

1. Mop using electrostatic dust mop or vacuum
2. For large unobstructed areas: Wet scrub using automatic scrubbing machine or single disc polisher $\leq 600\text{RPM}$ (use medium/soft nylon bristle brush) and Armstrong **Accolade Safe Plus Bathroom Floor & Surface Cleaner***. Rinse clean.
3. For small areas, such as ensuites & bathrooms: Wet scrub using soft bristled broom and Armstrong **Accolade Safe Plus Bathroom Floor & Surface Cleaner***. Rinse with clean water.



Routine care:

Daily: Sweep, vacuum, static mop. Regularly damp mop and wet scrub; use **Accolade Safe Plus Bathroom Floor & Surface Cleaner***. Frequency and type of maintenance required depends on traffic flow, application, environmental conditions and customer requirements. **Light** and **accent colours** can require more maintenance. where practical choose darker, more camouflaging colours.

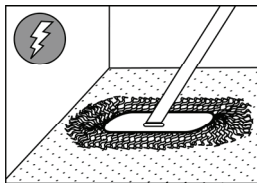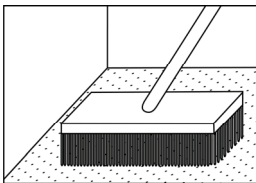



Daily:

- Sweep, static dust mop, vacuum thoroughly to remove all dirt and dust.

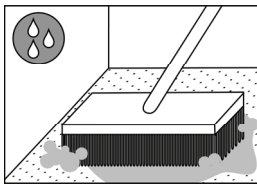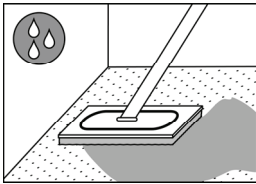

Daily / Regular:

- Damp Mop (Nylon/Rayon/Microfibre)
- Regular:** Small areas, such as ensuites & bathrooms.
- Wet scrub using a soft bristled broom. Rinse with clean water.
- Use Accolade Safe Plus Bathroom Floor & Surface Cleaner***;

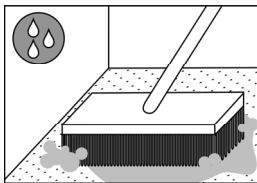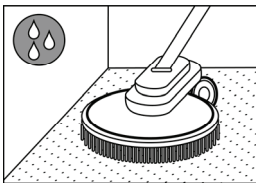

Regular: Large & unobstructed areas.

- Wet Scrub using automatic scrubbing machine or single disc polisher (use medium/soft nylon bristle brush) $\leq 600\text{RPM}$. Rinse clean
- Wet scrub around edges & fixtures using soft bristled broom.
- Rinse with clean water.

Use Accolade Safe Plus Bathroom Floor & Surface Cleaner*;

Protection:

Use walk-off mats that are as wide as the doorway entrances and long enough (min. 3 average paces) to trap dirt before reaching the resilient floor. Ensure that walk-off mats are cleaned frequently.

Sand and grit are abrasive and can damage floors; stopping dirt at the entrance means less dirt trafficked through the building, protecting your investment and helping keep maintenance costs down.

Ensure all furniture legs have well maintained non-abrasive feet. Exposed metal legs can damage flooring.

Rubber products such as chair feet, tyres & mats can stain flooring, do not leave these in contact with flooring.

Stain Removal:

Treatment should be carried out when stains are fresh, immediately remove contaminant. Spot clean with a neutral floor cleaner using soft nylon brush. After stains have been removed, rinse floor with clean water and allow to dry.

Warnings & General Hints

1. DO NOT USE: Highly acidic, alkali, caustic or solvent agents such as hydrochloric/sulfamic acid, toilet bowl cleaner, paint stripper, benzene, toluol, acetone or strong scouring powders, as these will damage the floor.
2. All vinyl flooring should be protected during the construction period. **Armstrong do not recommend covering our PVC floor or wall products with plastic materials (such as builders plastic, corfluke, carpet protector film etc).**
3. Adhesive residue may be removed using a clean white cloth dampened with small amounts of mineral turps, carefully following warnings on container, immediately rinse with clean water (test in inconspicuous area first)
4. Auto scrubbing in unobstructed areas takes approximately 20% of the time of damp mopping. For maximum efficiency use damp mopping in obstructed areas only.
5. Spot mopping / spot scrubbing should be used when necessary. **Spillages** – post wet floor signs and wipe up immediately. Allow to dry and remove signs.